Front Steps

Details from Island Painting & Waterproofing, Inc.


The Process involves:

- 1. Cleaning and degreasing floor surface with pressure wash 3,500 psi.
- 2. Let surface dry.
- 3. Apply textured (base/primer) CONFLEX concrete water proofer coating. 1 or 2 gallons.
- 4. Let 1st coat dry.
- 5. Apply Armoseal TredPlex Floor coat. 1 gallon.

Note: Use proper protection, tools and equipment. Rinse Clean and properly dispose leftovers.





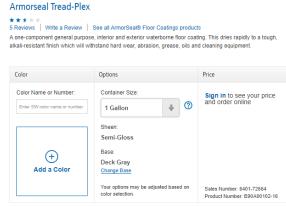

AMSL TDPLX UTRDEEP Custom: HARBORSIDE FLOOR CCE*Color Cast OZ 32 64 128 W1 White 16 20 B1 Black 12 14 N1 Raw Umber 18 63 R2 Maroon 34 1 Y3 Deep Gold 22 Custom Manual Match **FLOOR**